



This document explains how to install the ICC Printer profiles for your Epson Stylus printer with Lyson Fotonic or Lysonic Inks. There are three profiles available which are suitable for the following papers:

Lyson 170gsm Matt Paper.

Lyson Gloss Papers.

Lyson Fine Art Paper (All Varieties).

Recommended Setup:

For Mac users we recommend OS 9.2/ OSX with ColorSync version 3.04 or later. If your system uses ColorSync 3.0 then you should download the upgrade from the Apple Website (www.apple.com). Users of OS 8.6 or earlier should use ColorSync 2.6.1. Users of version 2.5 or 2.6 can upgrade using the free download from Apple.

Using the profiles is a simple process. Once you have made the correct settings in the print driver you can then select the profile for your paper and the software will do the rest.

For more information on how profiles work, setting up Photoshop and calibrating your monitor for accurate colour display, as well as frequently asked questions and troubleshooting, download the "Colour Management 2002" pdf document from the Technical page of the Lyson website, www.lyson.com.

Epson Printer Profile Installation Instructions

AppleMac, Photoshop 5/6/7

Step 1.

Drag and drop the profiles into the “ColorSync Profiles” folder found in the “System” folder on your Hard Drive.

(OSX-Hard Drive-Library-ColorSync-Profiles)

Step 2.

Restart Photoshop.

Step 3.

With an image open, go to

FILE-PAGE SETUP.

Select “Properties”

Select “Custom” and then “Advanced”

Step 4

Select “Photo Quality Glossy Film”

for Gloss Papers

Select “Photo Quality Ink Jet Paper”

for all other papers.

Select “Photo-1440dpi” as the Print Quality.

Select highest quality print settings.

Select “No Colour Adjustment” from the Color Adjustment options.

Click “OK”

Step 5

Photoshop 5: Go to FILE-PRINT

Select the profile for your preferred media in the “Space” drop down menu.

Click “OK” to start printing.

Photoshop 6: Go to FILE-PRINT

Ensure “Source Space” is set to “Document”.

Select the required printer profile in the

“Print Space; Profile” box.

Select “Perceptual” as the rendering intent.

Click “OK” to start printing.

Photoshop 7: Go to FILE-PRINT PREVIEW

Activate “Show More Options”

Select “Color Management” from the drop down menu.

Select the Profile from the

“Print Space; Profile” box.

Select “Perceptual” as the rendering intent.

Click Print to start printing.