



LYSON

The Digital Ink Company

This document explains how to install the ICC Printer profiles for your Epson printer with Lysonic or Fotonic Inks. There are three profiles available which are suitable for the following papers:

Lyson Gloss Papers.

Lyson Fine Art Paper (All Varieties).

Lyson 170g Matt Paper

PC Setup Advice.

Photoshop places heavy demands upon your PC. Ensure that you have as much RAM installed as you can afford.

In the “Preferences-Plug Ins and Scratch Disk” menu of Photoshop ensure your four Scratch Disk options are allocated to your internal Hard Drive. This allows Photoshop to use your Hard Drive to store temporary data when there is no more RAM available. Never use an external Hard Drive as a Scratch Disk as this will slow Photoshop down.

In the “Preferences-Memory and Image Cache” menu allocate 100% of your system memory to Photoshop. PCs will dynamically allocate RAM according to the number of applications open. Setting the memory allocation to 100% ensures that Windows is able to give Photoshop as much RAM as possible.

Using the profiles is a simple process. Once you have made the correct settings in the print driver you can then select the profile for your paper and the software will do the rest.

For more information on how profiles work, setting up Photoshop and calibrating your monitor for accurate colour display, as well as frequently asked questions and troubleshooting, download the “Colour Management 2002” pdf document from the Technical page of the Lyson website, www.lyson.com.

Epson Printer Profile Installation Instructions

PC, Photoshop 5/6/7

Step 1.

Drag and drop the profiles into the "Color" folder

C:/Windows/System/Color (win 9x)

C:/windows/system32/spool/drivers/color (Win2000/ XP)

Step 2.

Restart Photoshop.

Step 3.

With an image open, go to

FILE-PAGE SETUP.

Select "Properties"

Select "Custom" and then "Advanced"

Step 4

Select "Photo Quality Glossy Film"

for Gloss Papers

Select "Photo Quality Ink Jet Paper"

for all other papers.

Select "Photo-1440dpi" as the Print Quality.

Select highest quality print settings.

Select "No Colour Adjustment" from the Color Adjustment options.

Click "OK"

Step 5

Photoshop 5: Go to **FILE-PRINT**

Select the profile for your preferred media in the "Space" drop down menu.

Click "OK" to start printing.

Photoshop 6: Go to **FILE-PRINT**

Ensure "Source Space" is set to "Document".

Select the required printer profile in the

"Print Space; Profile" box.

Select "Perceptual" as the rendering intent.

Click "OK" to start printing.

Photoshop 7: Go to **FILE-PRINT PREVIEW**

Activate "Show More Options"

Select "Color Management" from the drop down menu.

Select the Profile from the

"Print Space; Profile" box.

Select "Perceptual" as the rendering intent.

Click Print to start printing.